

FIG. 1

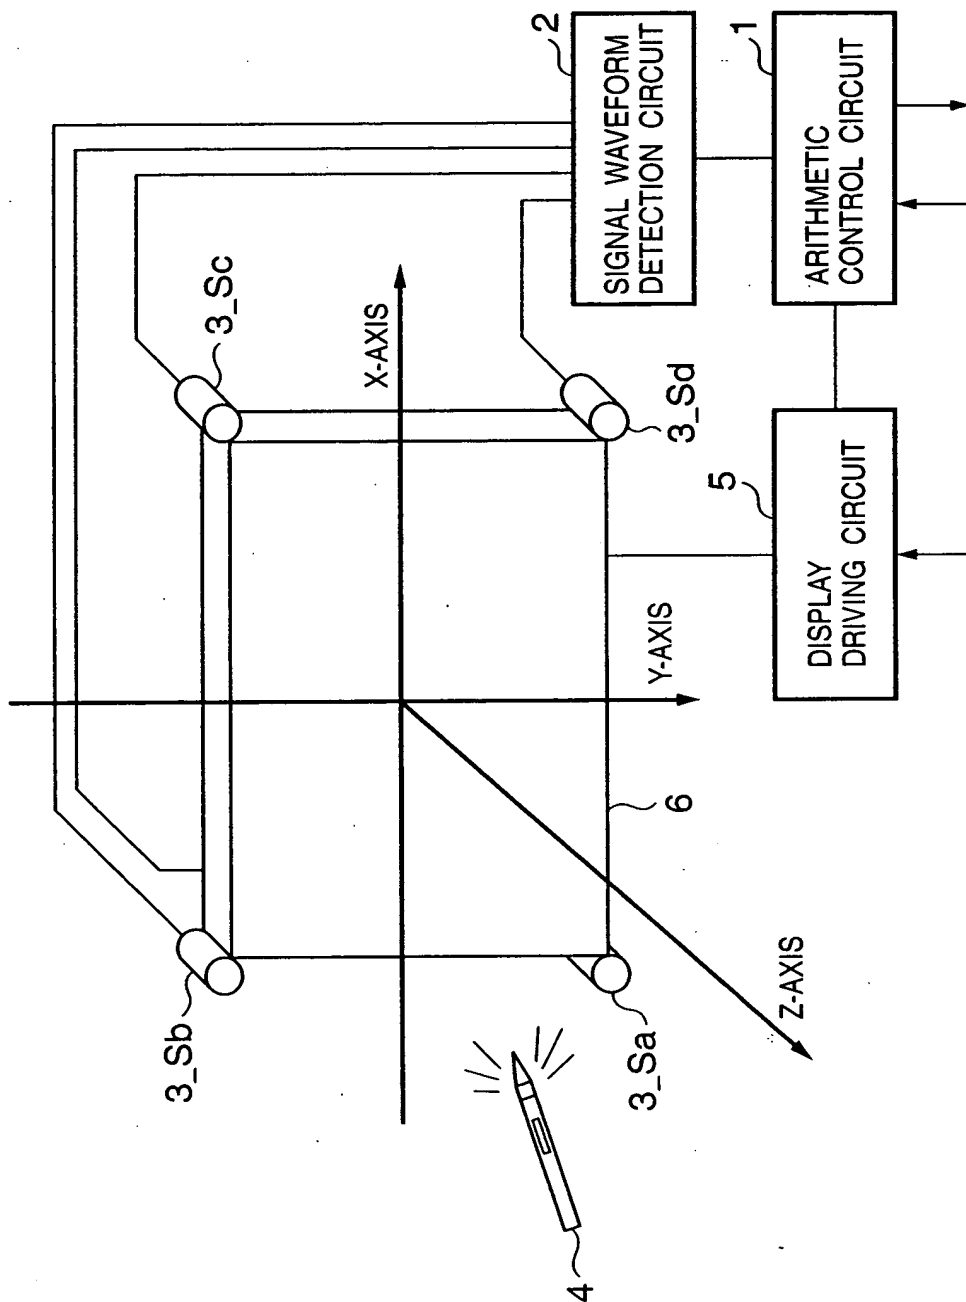



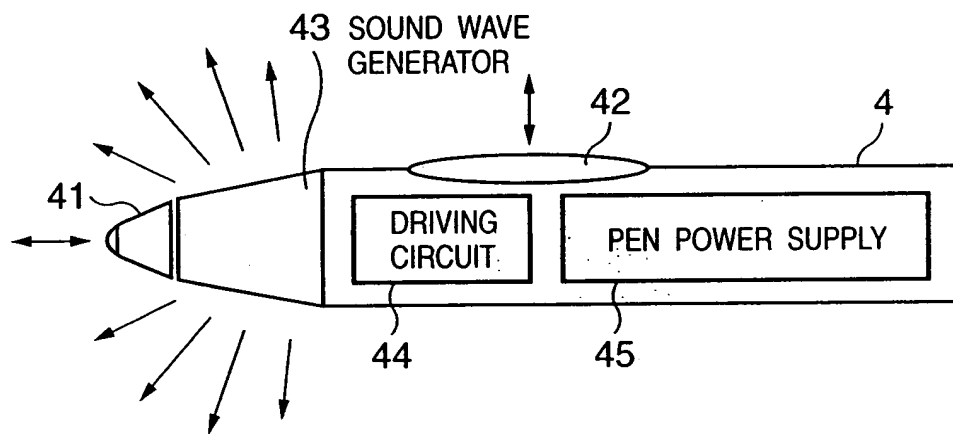
FIG. 2

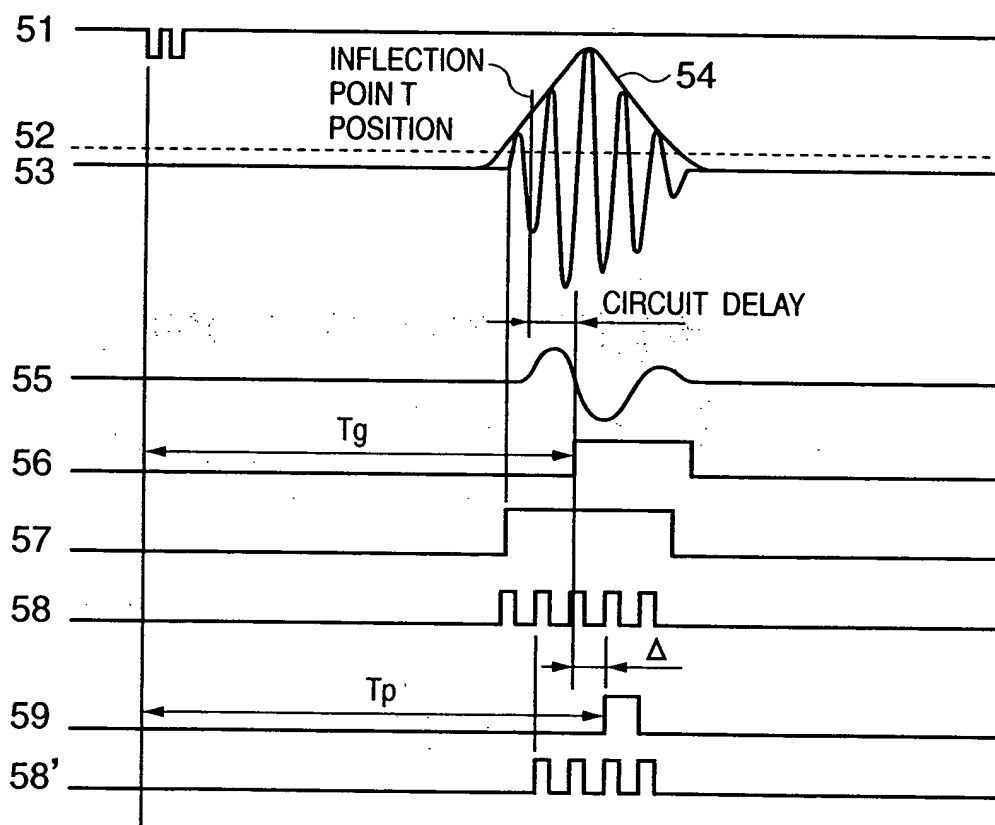FIG. 3



10066620-020602

FIG. 4

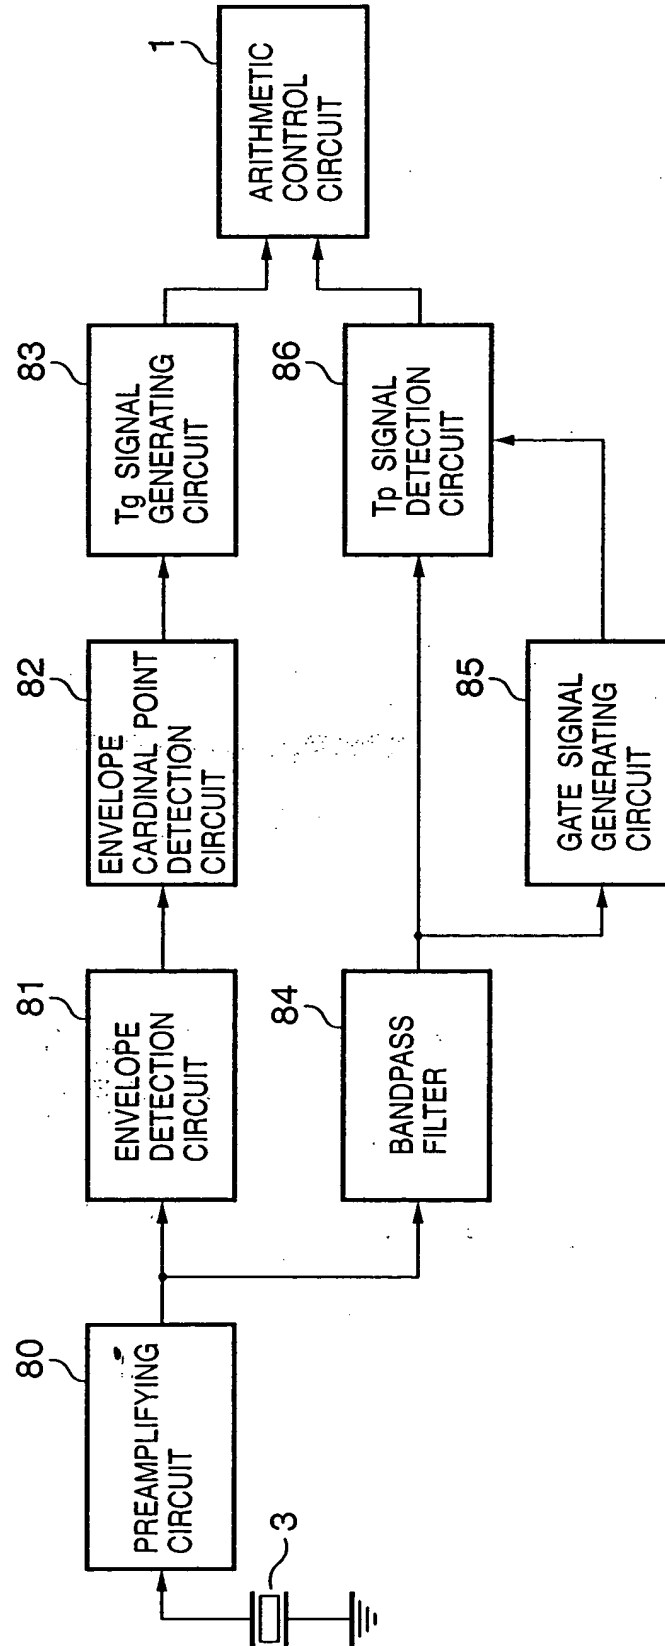


FIG. 5


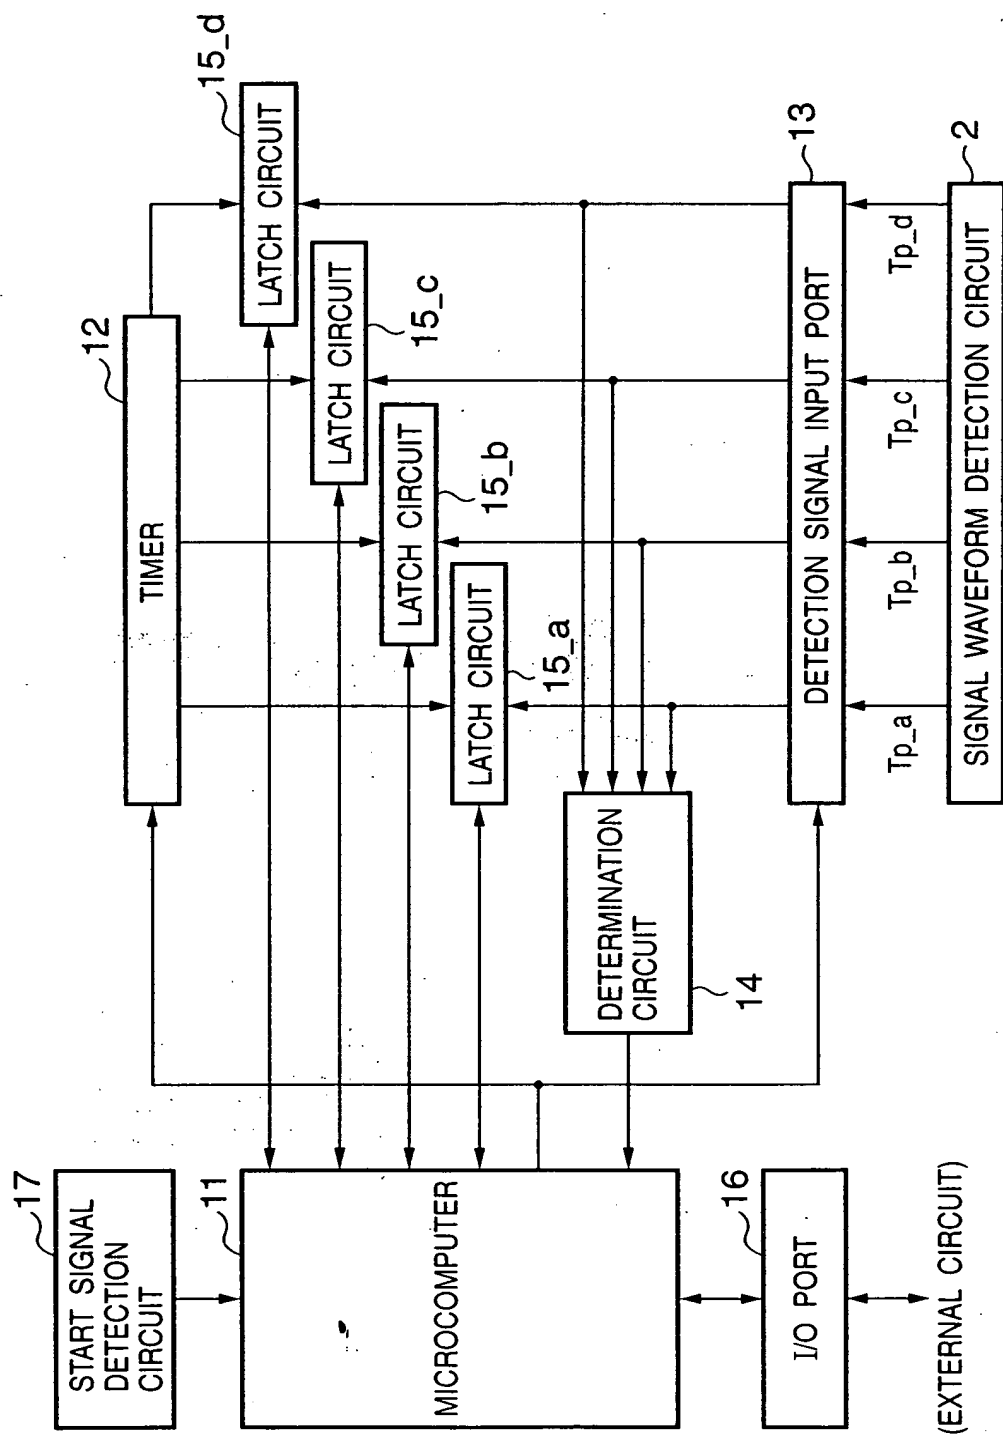


FIG. 6

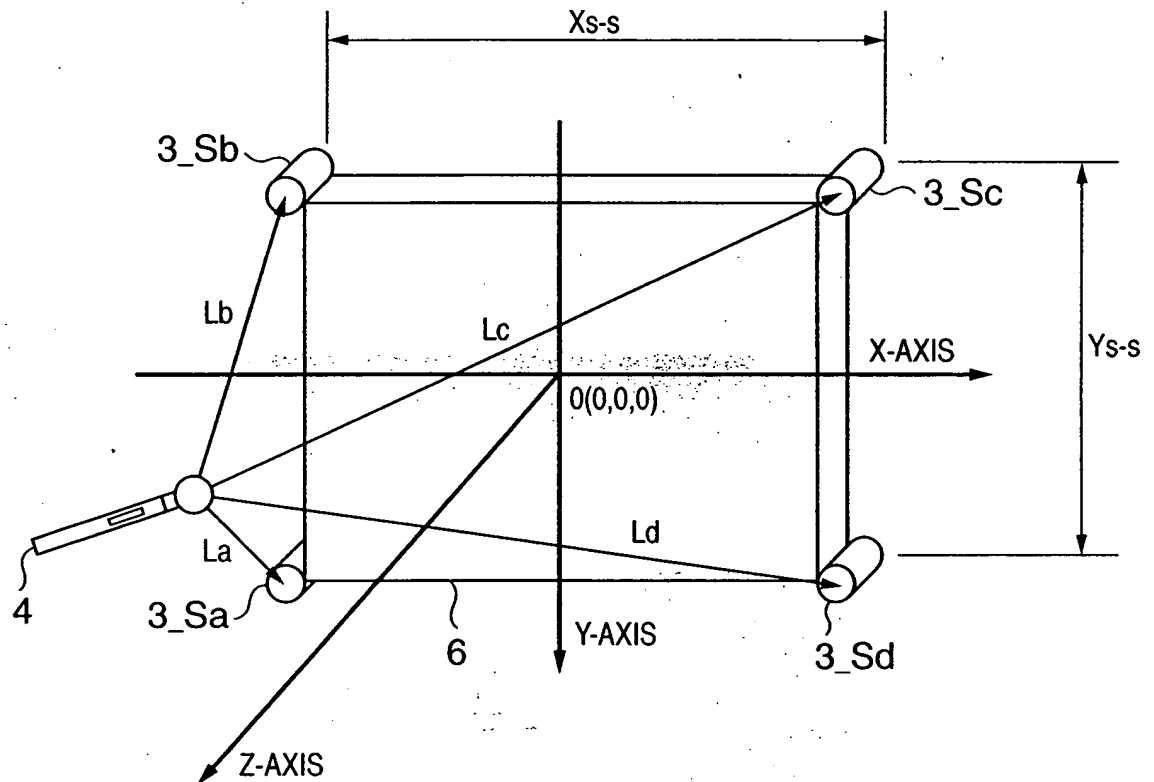

10065520.020602

FIG. 7



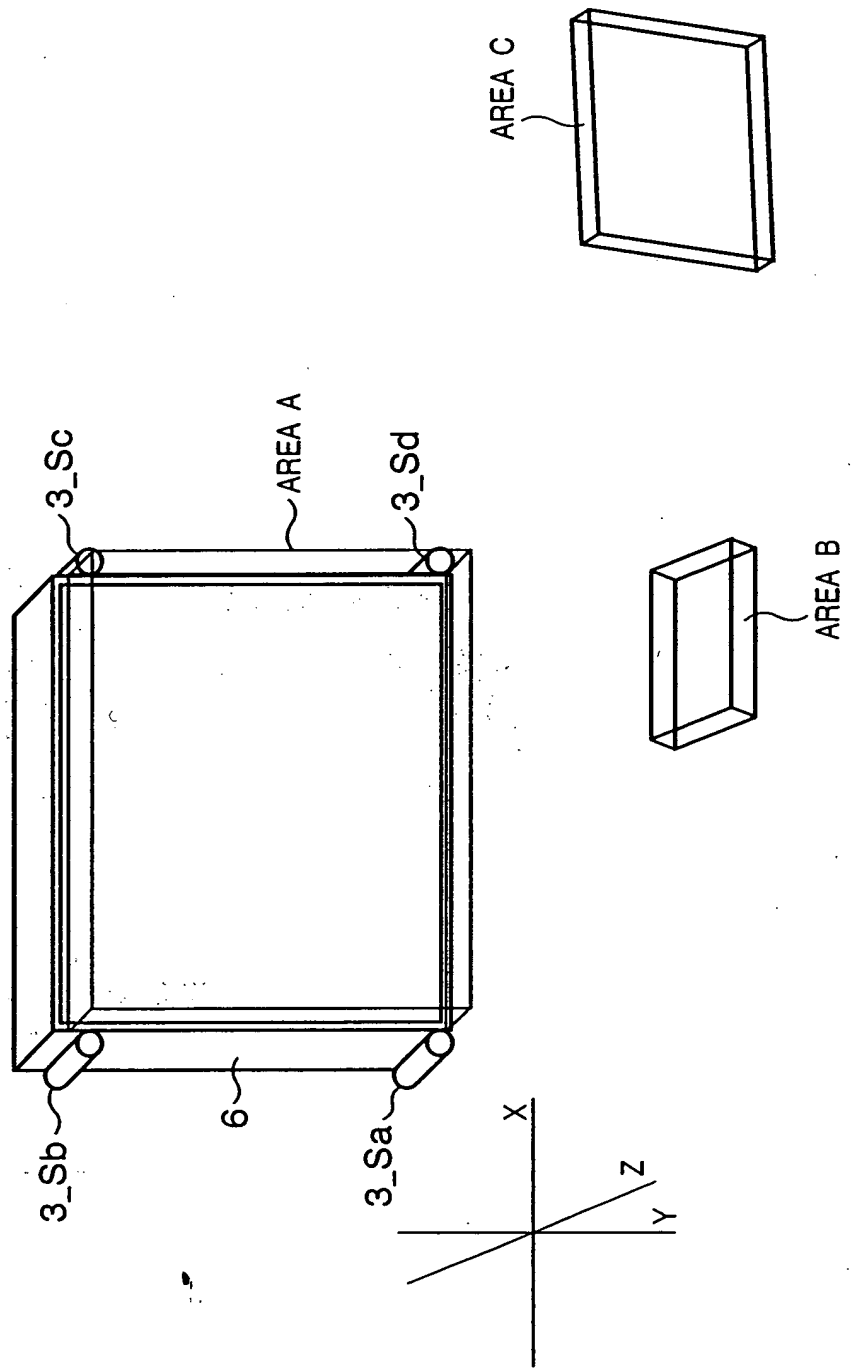


FIG. 8

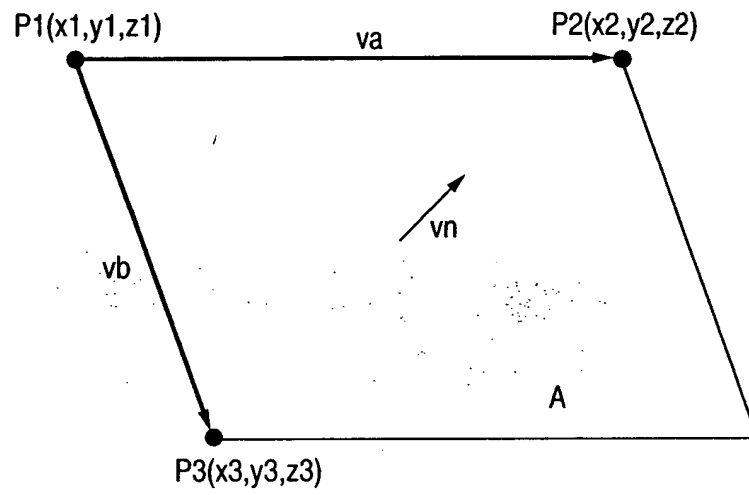


10066620-0299900T

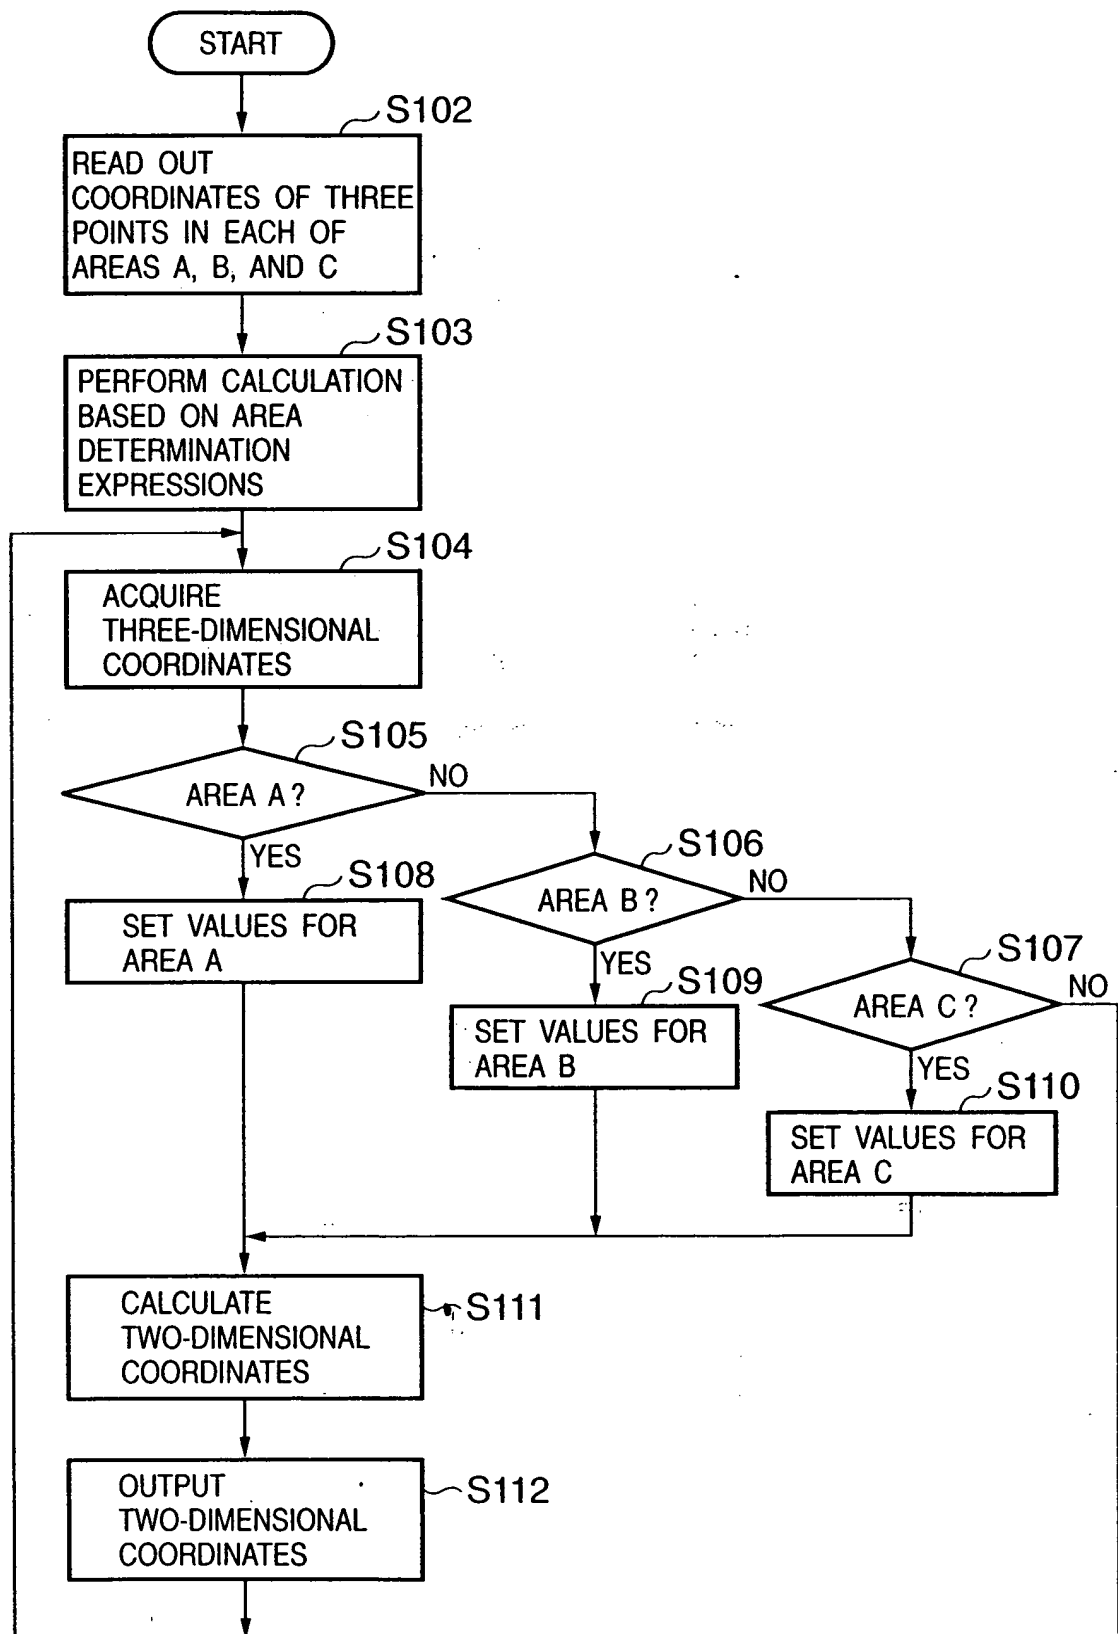FIG. 9




209020-0299900T

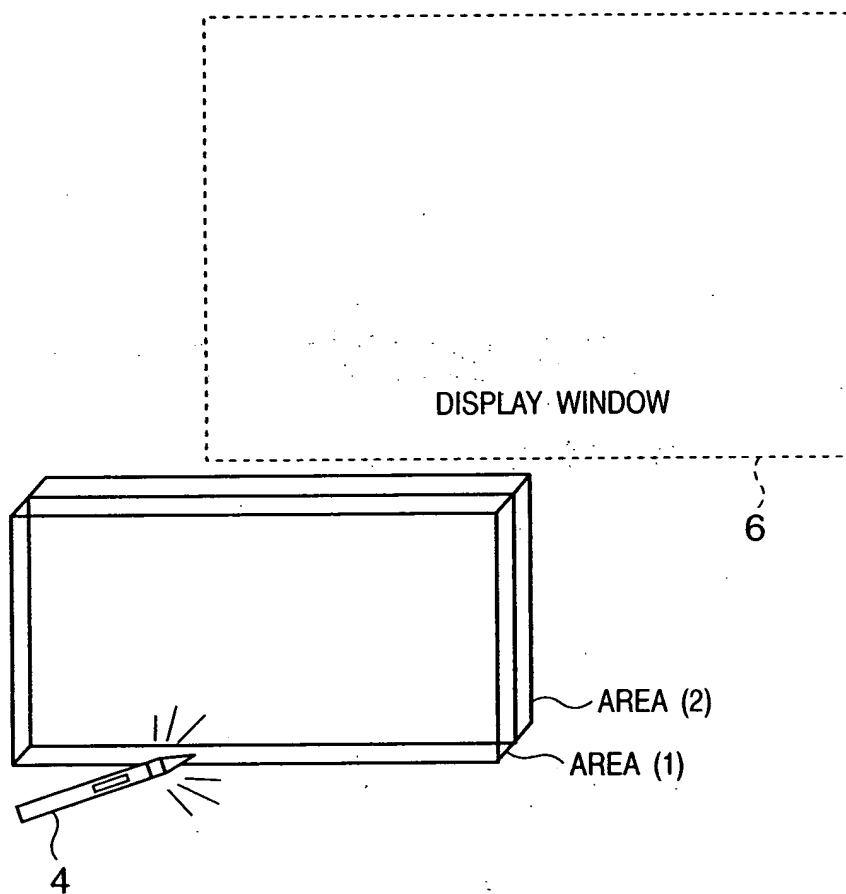FIG. 10



209020-02999001

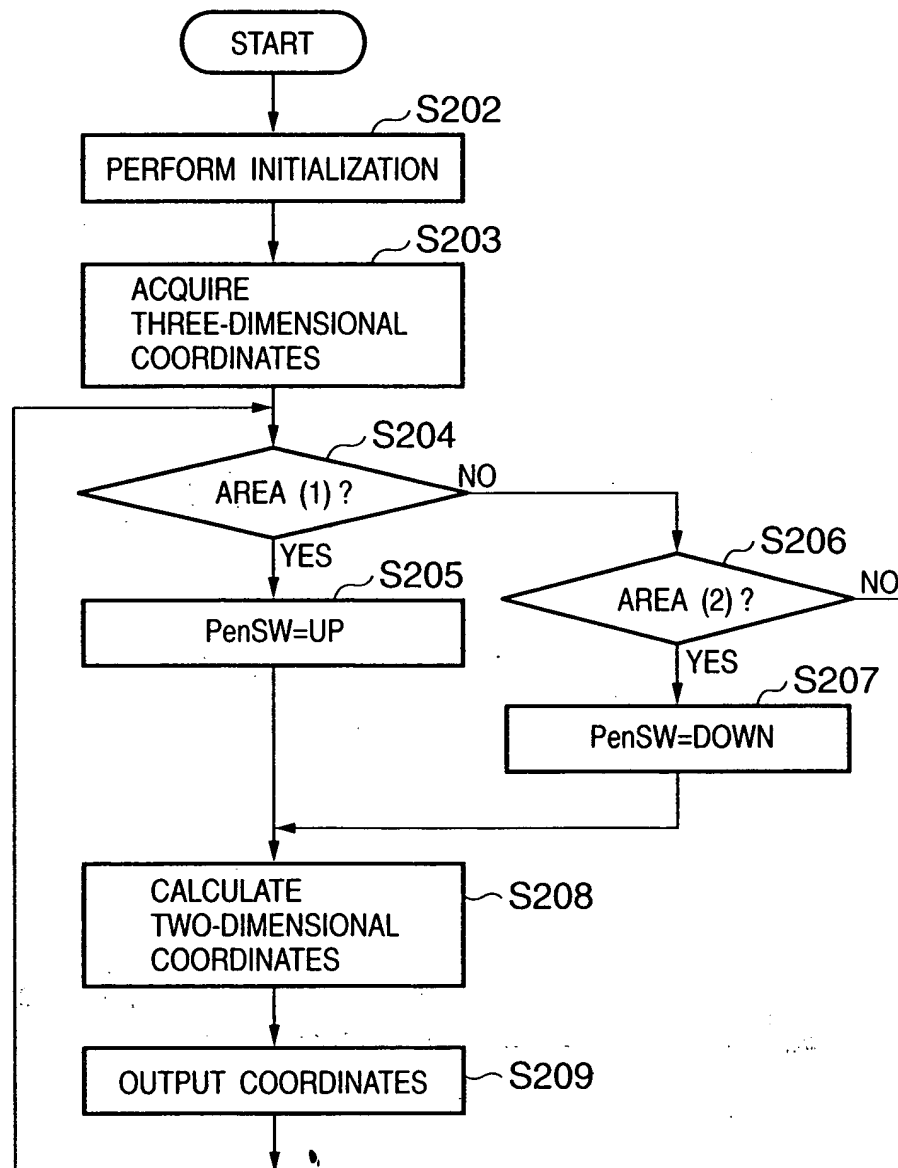
FIG. 11



209020-0299900T

10066620-020602

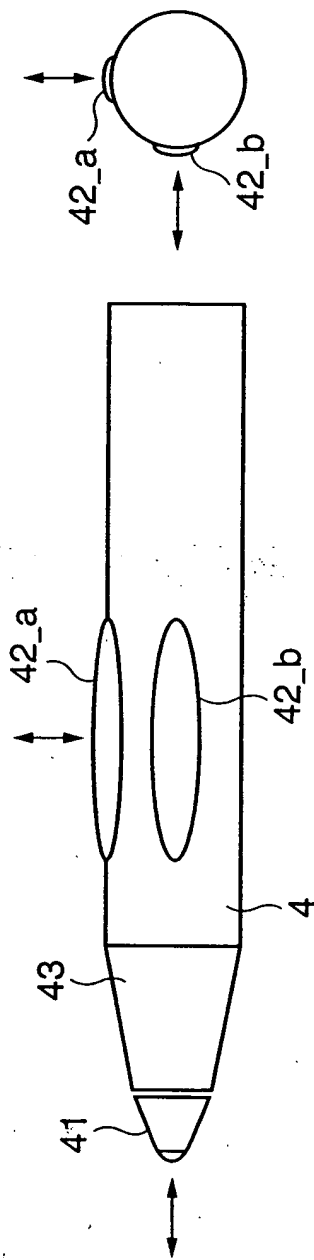FIG. 12



209020-0299900T

FIG. 13

AREA	PEN TIP SWITCH 41	PEN SIDE SWITCH 42_a	PEN SIDE SWITCH 42_b	PEN DOWN SIGNAL
AREA A	LEFT	LEFT	RIGHT	PEN TIP SW
AREA B	DOUBLE CLICK	RIGHT	LEFT	SIDE SW1
AREA C	LEFT	LEFT	RIGHT	DOWN